




Casio Cassiopeia E-125 Touch Screen Replacement

This guide will show you how to replace the touch screen.

Written By: Ryan Fernandez

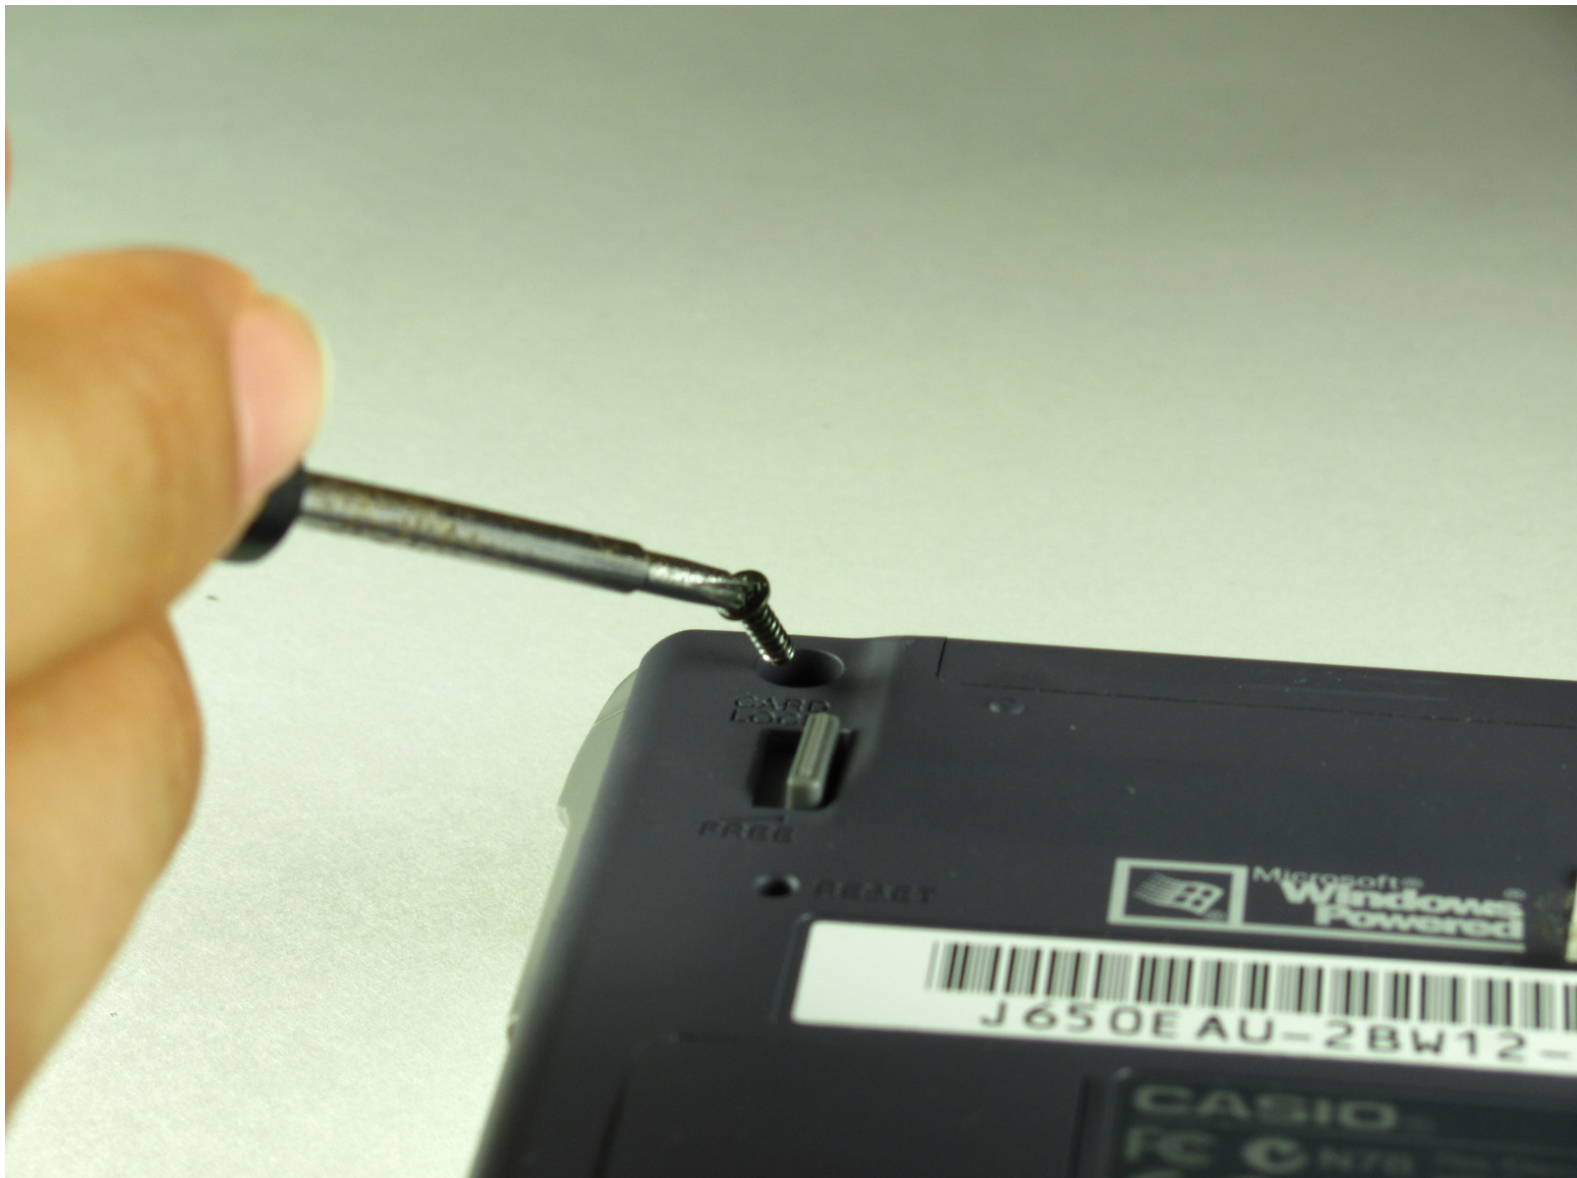



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the device over to the back side.

Step 2



- Slide the small switch on the back to "MAIN".

Step 3




- Slide the battery cover downwards.
- Pull off the battery cover.

Step 4




- Pull the black tab to remove the battery.

Step 5 — Touch Screen

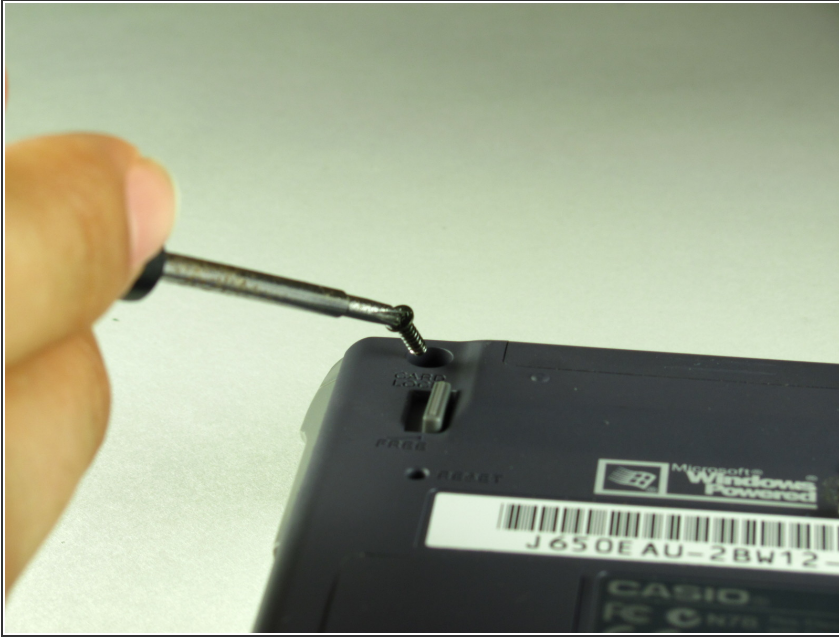

- Using the Phillips #00 screwdriver, remove the two screws near the top of the device.

Step 6

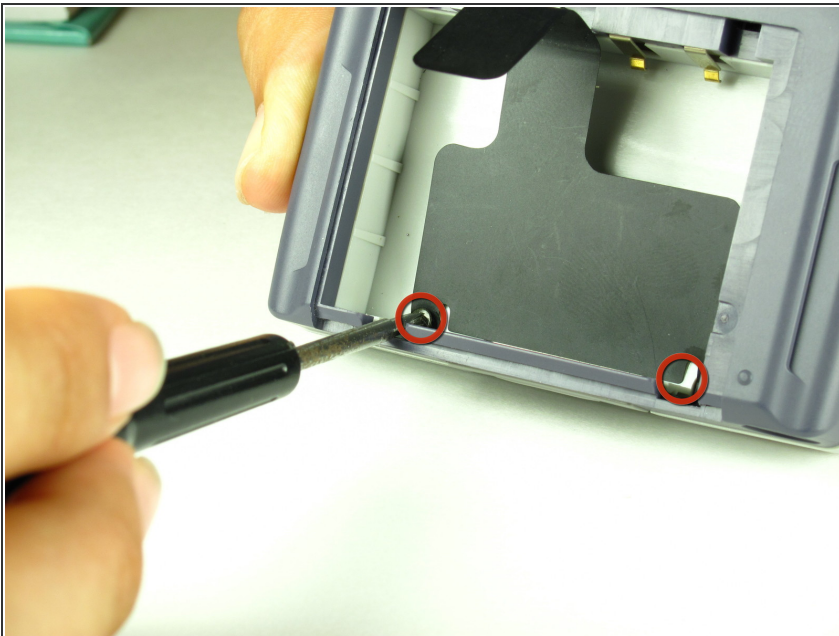


- Using the Phillips #00 screwdriver, remove the two screws located inside the battery compartment.

Step 7




- Partially separate the two halves of the case by inserting the tip of a small flat head screw driver into the space between the halves.


Step 8

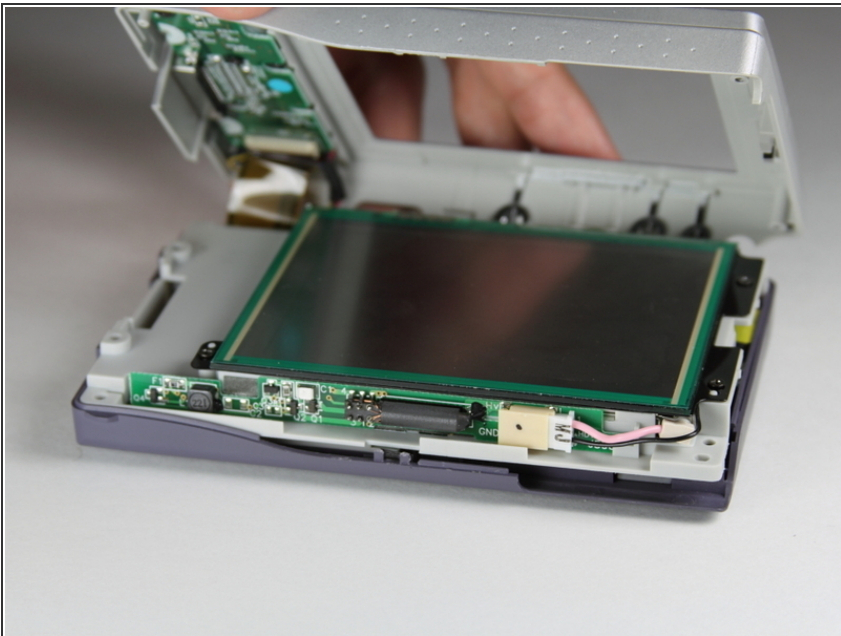

- Pry the two halves of the case apart with the small flat head screwdriver.


Step 9

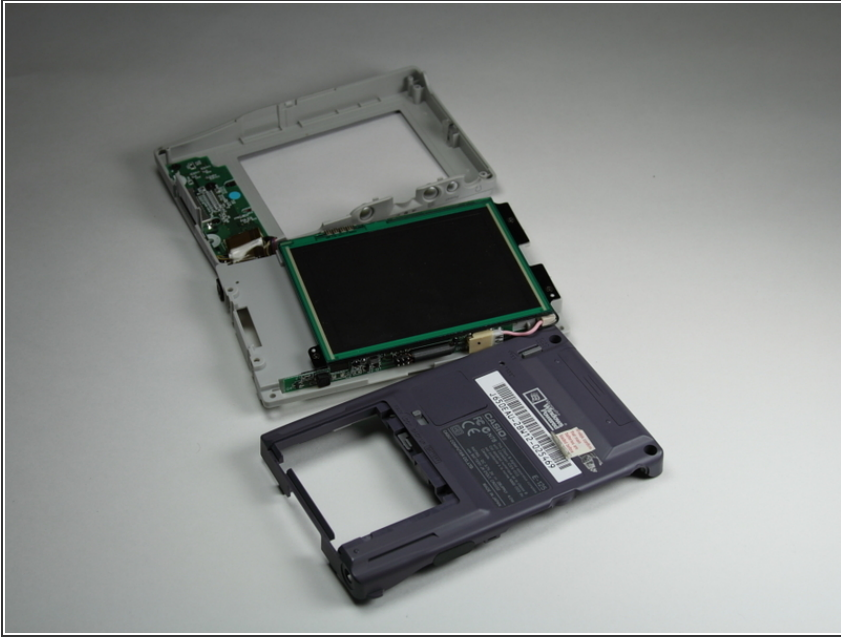

 **Caution:** be careful not to pull out the wires connecting the two halves of the outer case. These wires are necessary for the device to be able to function.


- Lay the two halves of the outer case next to the central components as shown.

Step 10

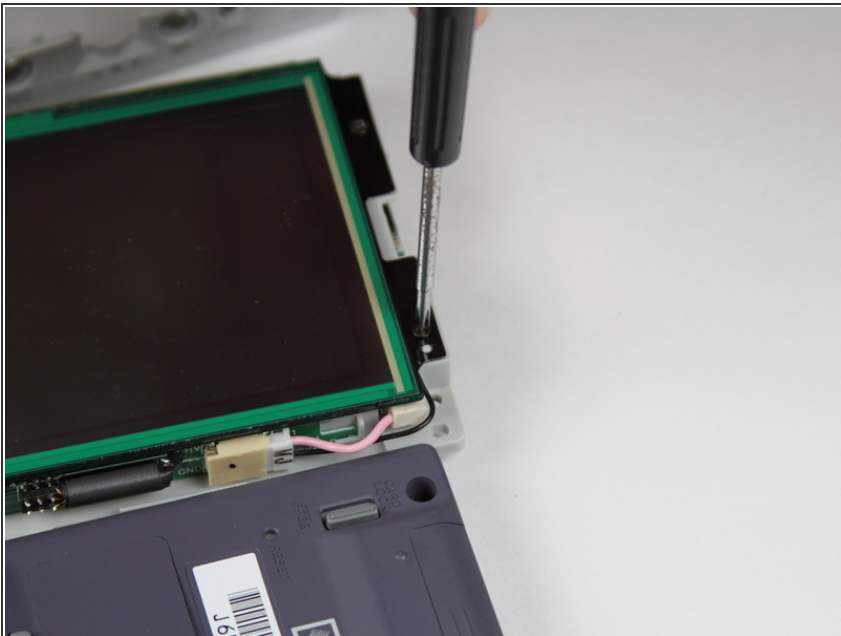

- Using the #00 Phillips screwdriver, remove the screws from the corners of the screen. There are 3 screws total.

Step 11

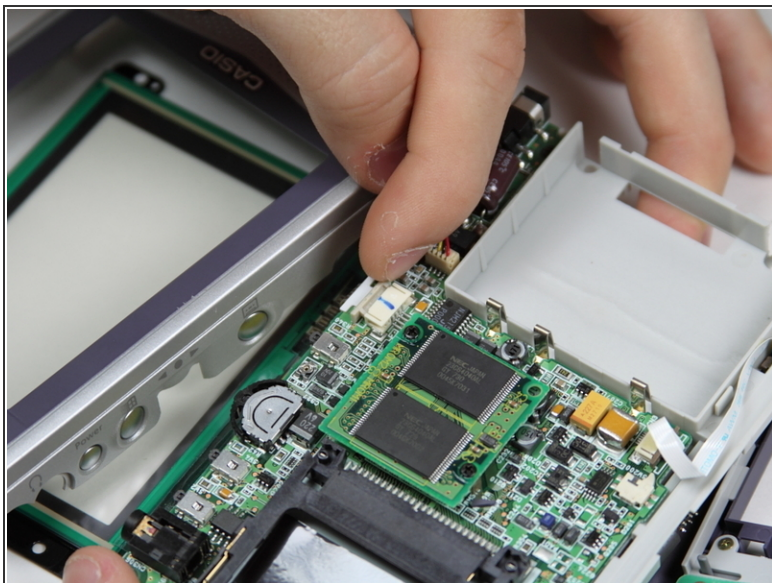

- Lift the tab on the motherboard and pull out the ribbon cable.
- After the ribbon cable is detached from the motherboard, the touch screen is completely separated from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 08:21:12 AM.